

CONTROL PANEL LAYOUT

HITACHI DRYER

#DE-N4S

FILTER DUST INDICATOR

It indicates the condition of dust in the filter.

- Clean the filter when the light is flashing.
- When the door is opened during the light flashing, it buzzes for 5 sec., and the light will be off.

フィルター目詰まり

PROCESS INDICATOR

Indicator will show the process of dry cycle.

- Indicator is lit up while dry cycle is halted, or the door is opened, or buzzes.

乾燥中
あと10分

ONE TOUCH BUTTON (START & PAUSE BUTTON)


Press this button to start and to halt.

- It will stop automatically when the door is opened during the operation. Please press the button to restart.

POWER SWITCH

The power will be supplied when pressed.

- The power is automatically cut off within 5 minutes after completion of operation. (Auto-Off function)
- The power will not be cut off for 12 hours when the filter dust indicator is flashing.
- Please check the filter when the filter dust indicator is flashing and buzzed at " " position.

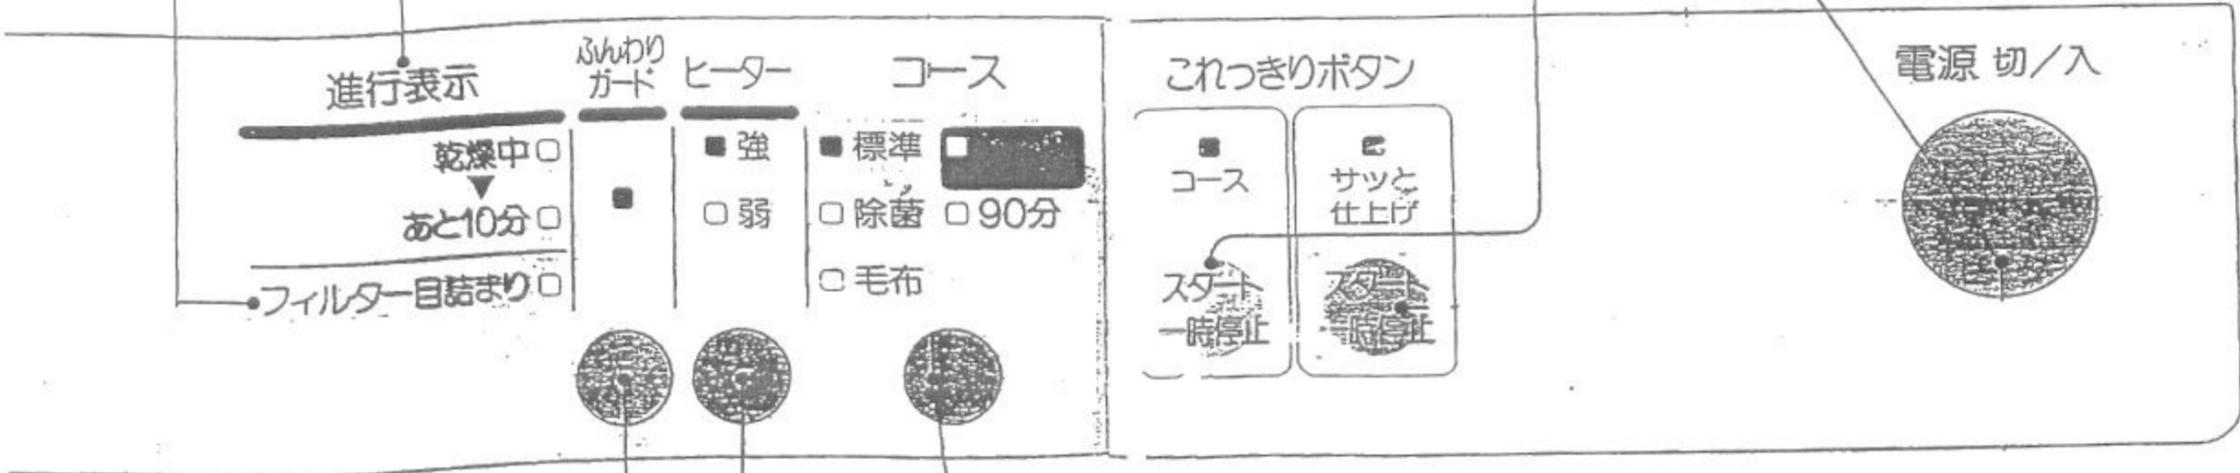

GENTLE PROTECTION BUTTON

If you do not require this cycle, press the button.

- After completion of the dry cycle, this function enables to keep clothing soft and gentle by its automatic ventilation for 12 seconds at each time (every 5 minutes, available for 2 hours).

HEATER SELECTOR

Select your requiring heater temperature by pressing the button.

- Dryer is set for ventilation when the light for 「強」, 「弱」 is off.

DRY PROGRAM SELECTOR

You will be able to choose one of the five programs to dry clothing.

- Select the program you require by pressing this button.
- Under the "Predry" program, the dryer will operate for the specific time in accordance with the quantity of clothing, independently of dryness of existing clothing inside the dryer.
- Under the "90 min" program, the dryer will operate for 90 minutes, independently of dryness of existing clothing inside the dryer.