


SHARP RES-140
CONVECTION OVEN RANGE
OPERATION MANUAL

*This control panel might be designed differently from that of the product you purchased, but the usage information is the same.

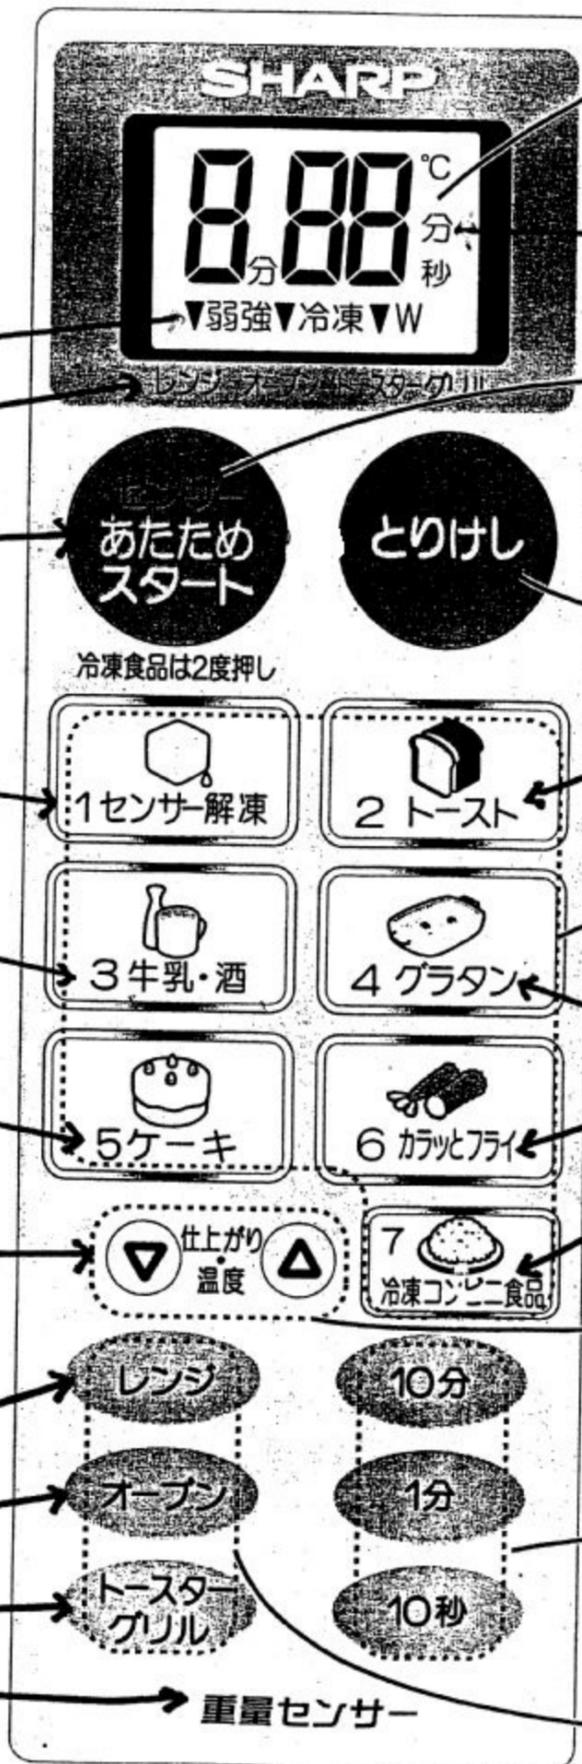

Low (L): High (H)/ Frozen / W L

MICRO OVEN TOAST/GRILL

sensor REHEAT / START

AUTO-THAW

BEVERAGE

CAKE

FINISH(FIN)/TEMP

MICRO 10 min

CONV 1min

TOAST/GRILL 10 sec

AUTO-WEIGHT sensor

Display panel (All indications show in the panel display to describe usage information)
 Heating time / Temperature / Cooking progress

°C /min. /sec.

REHEAT / START pad

Use for automatic reheating or manual cooking start

STOP / CLEAR

STOP / CLEAR pad

Use to stop cooking or reset wrong key operation.

* Open the door without touching STOP/CLEAR pad when stirring well during operation

TOAST

Automatic cooking pads (1-7)

Use to cook in automatic.

No need to set cooking time or temperature.

GRATIN

CRISPY / FRIES

FROZEN CONVENIENCE FOOD

FIN / TEMP pad

Use to set automatic heating level or to adjust manual convection heating temperature.

Time set pads

Use to set manual cooking time.

Manual cooking pads

Use to cook with time and temperature set.