

Control Panel: NW-42CF

Indication of detergent and water quantity

Through the lights that blink and remain lit up as required on the control panel, you are advised of recommendable amount of detergent (as a rough measure) and water level.

- When water level is set to "43 L" or "29 L", the corresponding lamp stays illuminated, and another lamp flashes on and off when the level is set to "37 L" or "20 L". (Although water level can be set to any level in the range from 20 L to 43 L, only these four water levels can be indicated.)
- The recommendable amount of detergent indicated is for powdered detergent (of concentrated type) only.

Indication of selected and active cycle or mode

Each lamp of Wash, Rinse and Spin cycles illuminates to inform you of the selected and the ongoing cycle or mode.

- During operation, each of the corresponding lamps to the active cycle or mode blinks when required.
- When "Extra Rinse" (the mode of water-circulating overflow rinsing operation) is enabled, the Rinse light blinks.

Lid Lock ON indicator

When the lid is locked in place, "Lid Lock ON" indicator blinks.

- However, the lid is not actually locked in place even if the indicator blinks in the following intervals:
 - Between the instant when power is turned on first after the power plug is inserted into a power outlet and the instant when each of the initial indication lights illuminate.
 - Between the instant when end-of-operation buzzer beeps after the spinning motion comes to a full stop at the end of spin-drying operation and the instant when power is turned off automatically.

When you think buzzer that signals the end of operation annoys you... You can deactivate the buzzer function as follows:

- Turn ON the Power switch.
- Press and hold down one of the Start/Pause buttons for 3 sec. or longer. (Then, buzzer sounds like "Beep-Pip Pip-Beep".)

- You can deactivate the buzzer by any one of the "Fuzzy", "Speedy" and "Delicate" buttons.
- If you want to activate the buzzer again, take the Steps 1 and 2 once more.
- When you remove the power plug from a power outlet and insert it into the outlet again, the current setting will be canceled so that the buzzer will be activated again.

Child Lock

For safety and injury prevention of users and children, the lid has been designed to be locked in place automatically after agitation by pulsator in washing operation is completed, then "Lid Lock ON" lamp will blink. The lid will be unlocked automatically after the rotation of pulsator comes a full stop.

When you want to open the lid:




Press the button whose indication light is on. → Then, the Lid Lock will be unlocked after pulsator comes to a full stop.

When you re-start the operation:

If operation was forced to stop temporarily during water-saving shower rinsing or spin-drying operation, the lid should be locked in place immediately. Otherwise, the lid will be locked in place by itself when the machine enters the aforementioned mode of operation.

■ You can also arrange for the lid to be locked in place all the time during operation.

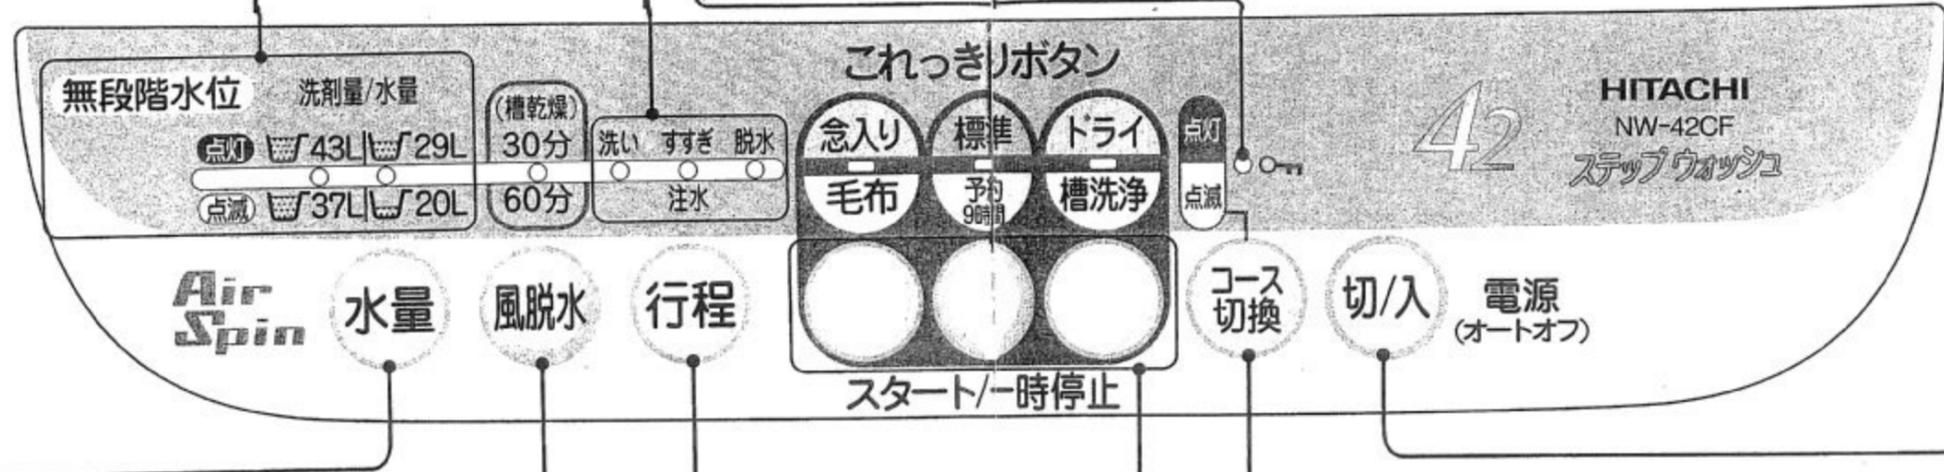

Water Level button

Push this button when setting water level to your desired level in advance or when you want to supply more water into the unit during agitation process, according to your needs.

- After the operation gets started, you can change the currently selected water level to a different level until the ongoing washing or rinsing cycle is completed. In that case, be sure to cause the operation to pause by pressing the applicable Start/Pause button once every time you make the change.
- Press the Water Level button when wishing to supply more water to the unit during the washing and rinsing processes. While the button is being pressed and held down, water is continuously fed. (When the water level reaches "43 L", the water supply comes to a stop and doesn't go beyond that level any longer.)

Spin Dry button

Push this button when setting "Spin-drying" at the end of "Fuzzy", "Heavy", "Delay 9hrs." and "Fin Dry", and setting "washing-tub wash".

- You can set "30 Min." or "60 Min.".
- Stay on: 30 Min.
- Blink: 60 Min.

Mode Selection button

With this model, you can perform only "Washing" or "Spin-drying" operation or "Extra rinse" (water-circulating overflow rinsing) operation, etc. as required.

- You cannot change the currently selected mode of operation once it gets started.

Start / Pause buttons ("One Touch" buttons)

These three buttons are used to start the operation or cause it to pause.

- Three fully automatic programs are user-selectable, depending on the type of laundries and the level of dirtiness. (Also, other three fully automatic programs [Heavy, small load and Soft] are selectable if you press either Water Level or Mode Selection button while holding down one of these One Touch buttons.)

Program Change button

Pressing this button allows you to select your favorite program by means of the three indication lights that illuminate or blink as follows:

Light stays illuminated when; "Heavy", "Fuzzy" or "Speedy" program is selected.

Light blinks when; "Delicate", "Blanket" or "Washing-tub Wash" is selected.

Power switch

Pressing this button turns the unit ON and OFF alternately.

- When turning ON or OFF the switch, "Lid Lock ON" light blinks. At this stage, the power switch remains unavailable. (If the power switch is turned OFF or switched back to ON while water supply is under way or the pulsator is rotating to agitate washing water during the washing and rinsing operations, it will not blink.)
- Upon completion of the whole operation, the buzzer beeps, the "Lid Lock ON" light blinks and the power is turned OFF automatically. (Auto-off function)

CAUTION

Never push the two-or-more buttons simultaneously. Otherwise, malfunction may result.

● You will hear two consecutive beeping sounds when setting the water level to "43L" or delay start to "9" hours later, and enabling "Wash", "Rinse" or "Spin" cycle individually to perform by Mode Selection button. (This is to inform you of the lights' reference point.)