

Control Panel : NW-42EF

Indication of detergent and water quantities

Reference quantities of detergent and water will be indicated by lighting or blinking indicator lamps.

- Indicates reference quantity based on detergent "ATTACK". For quantity of detergent, refer to Table on page 10 or "Reference quantity for use" shown on detergent container.
- *43 L* will light, *37 L* will blink, *29 L* will light and *20 L* will blink. (Setting is performed without quantity step, but indication is shown by 4 steps.)

Indication of selected and active cycle or mode

Lamps for Wash, Rinse and Spin cycles will light or blink to inform you of current operation cycle.


- During operation, the current operation process will be indicated by the lit lamp of each operation cycle.
- When "Pouring-rinsing" is being set, Rinse lamp will blink.

Air spin indication

Indicates either "30 minutes" or "60 minutes".

Course indication

Lamp of selected course will light. Each time the course button is pressed, lighting lamp will shift.

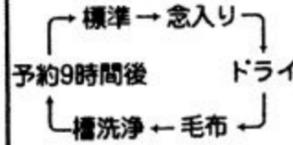

If you feel uncomfortable with finishing buzzer:

[Perform to set each time.]

Buzzer can be cancelled using the following procedure:

- Turn the power switch on.
 - Continuously press the Start button for 3 seconds or more. (Buzzer will sound and no buzzer mode will be set.)
- To set to buzzer mode again, perform steps 1 and 2 again. (Buzzer will sound.)
 - When the power switch is turned off, the no buzzer mode will be released and buzzer mode will be set.

[Note] When the buzzer mode is set or released, operation will start simultaneously.

Child lock:

To prevent injury or for safety of children, the lid will automatically lock when agitating process is completed, and "Lid locked" lamp will blink. When operation is complete, lock will automatically be released.



To open the lid



Press Start/pause button. → Lock will be released when rotation is stopped.

To re-start

When operation pauses during spinning and is then re-started, the lid will lock immediately. In other cases, when agitation of washing is complete, the lid will be locked.

■ Setting to keep the lid always locked during operation can be chosen. However, when the power switch is turned off, this setting will be released.

Lid lock indication

When the lid is locked, "Lid locked" lamp will blink.

■ However, the lid is not locked even though the lamp blinks in the following cases:

- The first time the power plug is connected and power is turned on, during the time until all indicator lamps light.
- When spinning operation stops and finish buzzer is heard, during the time until the power automatically turns off.



Water Level button

Use this button when setting water level in advance or when adding water during washing/rinsing process.

- After the operation starts, you can change the selected water level to a different level until the ongoing washing or rinsing cycle is completed. In this case, pause the operation and change the setting.
- To add water during washing or rinsing process, press the Water Level button continuously. While the button is being pressed and held down, water will be continuously supplied. (When the water level reaches *43 L*, water supply will automatically stop.)

Operation mode button

Use this button to set the mode according to your needs, such as washing only, spinning only, pouring/rinsing, etc.

- Once the operation starts, the mode cannot be changed.

Air Spin button

Use this button to perform Air-spinning after "Standard", "Heavy", "Blanket" or "Reservation for 9 hours later" course, or when "Drying washing tub" is set.

- Either "30 minutes" or "60 minutes" can be set.

One touch button (Start/Pause)

Use this button to start or pause operation.

Course button

Six courses can be selected according to the type of laundry and level of dirtiness.

- The lamp of the selected course will light.

Power switch

Pressing this button turns the power on or off.

- When the power is turned on or off, "Lid locked" lamp will blink. At this time, the power switch cannot be used. (When power is turned off during washing, pouring water/agitating in rinsing, or when power is turned on again, the lamp does not blink.)
- When the operation is completed, buzzer will be heard and "Lid locked" lamp will blink and power will automatically turn off.

- Consecutive beep sound will be heard twice when the following settings are selected: "43 L" in water level, no "Air Spin" selected, and "WASH", "Rinse", and "Spin" in operation mode. (This informs you of the reference point of each button for selecting setting.)

CAUTION

- Do not press two or more buttons simultaneously: Malfunction may result.