

## Direct Operation Modes

A press of each course button immediately starts the washer.

**START/HOLD**  
To change the course, temporarily turn off the POWER ON/OFF pad and then press the desired course button.

**Detergent/water level indicator lamps**  
The washer operates for about 5 sec without water to check the quantity of cloth. (Only when NORMAL, POWERFUL or SOAK course is selected)

**Water is supplied and automatic operation begins.**  
The flickering lamp denotes the selected operating course.

**To halt the washer in the middle of operation**  
● Press the currently flickering course button to halt the washer in the middle of operation. Press the button again to restart the washer.

## WATER LEVEL

Press this pad when you start the operation with rinsing, and when you want to check or change the water level. "Water level" is automatically decided by the amount of the laundry while washing.

- Water current changes corresponding to the indicated "water level".

## TIMER

Press this pad when you want to preset the finish-up time of washing. The timer cannot be used for the DELICATE course.

## Child-Alarm


This is the thoughtful function for the family having small children to alert if the top lid is opened.

- If the top lid is opened while laundry (washing - spinning), it stops and the buzzer sounds on.
- When the top lid is closed, the buzzer stops and the laundry resumes.

### How to set the Child-Alarm

Operate when you start washing (after you started).

Press **TIMER** while pressing **MANUAL**

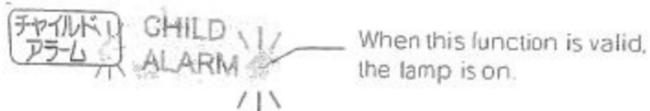

- To release, repeat the same procedure.
- If the power plug is pulled from the outlet or there is a power cut, the Child-Alarm will be released. Set once more.

## Turning off the buzzer

(Buzzer informing end of operation and when to insert wash load during the DELICATE course.)

During operation press and hold **MANUAL**

then press **WATER LEVEL**

- The buzzer is off if one "Beep" sound is heard.
- The buzzer is on if two "Beep" sound is heard.

## Changing modes during operation

Only **WATER LEVEL** can be changed once you press course pad.

To make other changes, turn off the washer and start from the beginning.

- If you put wet laundry into the tub, the washer indicates that more detergent is needed than for dry laundry. Adjust accordingly.
- If water remains in the tub, the washer indicates the medium level. Adjust accordingly.
- If you press water level before starting washing, the washer does not weigh the laundry and uses the water level you have selected.
- The detergent amount is indicated based on the spoon that is usually included with a pack of concentrated synthetic detergent powder

## COURSE PADS (START/HOLD)

The START/HOLD switch works for each course.

Courses to select	For the laundry as follows.
<b>NORMAL</b>	For the normal washing
<b>QUICK</b> (Less than 1.0/1.5kg)	For quick wash as you do slightly dirty laundry after you put on clothes
<b>POWERFUL</b>	For washing bulky laundry such as blankets or bedclothes
<b>SOAK</b>	For very dirty clothing and for thick clothing such as jeans
<b>DELICATE</b> (Less than 1.2kg)	For washing the fashionable dressing clothes or delicate garments with the  mark

## POWER ON/OFF

Press this pad to turn ON/OFF the power.

- This power switch will be turned OFF automatically in 5 minutes if the washer is left standing.

## MANUAL

During use only in independent operation mode such as washing or spin-drying

The operation mode changes with each press of a button.

Press the button this number of times: **1 → 2 → 3 → 4 → 5**

	1	2	3	4	5
Wash - Spin-dry	●				
Spin-dry only		●			
Wash only			●		
Wash/Spin-dry				●	
Wash - Rinse					●
Wash - Spin-dry					●

The above view mainly shows function controls such as the push buttons and lamps, and denotes the powered-on status of the washer. The patterns shown in the view, therefore, may slightly differ from actual ones.

## Precaution Prior to Starting the Washer

### Before starting the washer for first time

- Check the installation conditions.
- Check that the washer is firmly installed.
- Check that the water supply connector is securely connected.
- Check that the drain hose is placed correctly so that water drains out smoothly.

### Before starting the day's washing

- Open the water tap.
- Connect the power plug to the outlet.

### After completion of the day's washing

- Close the water tap every time the washing is finished.
- Remove the accumulated lint.

### CAUTION

Disconnect the power plug from the outlet before stopping the washer for a long time. Otherwise, the insulation may deteriorate, resulting in an electric shock, electric leakage or a fire when the washer is next used.

Note that the memory date such as timer, operation sound settings and the Child-Alarm setting will be cleared when the power plug is disconnected (or if a power failure occurs).