


< NE-T156 >

Door

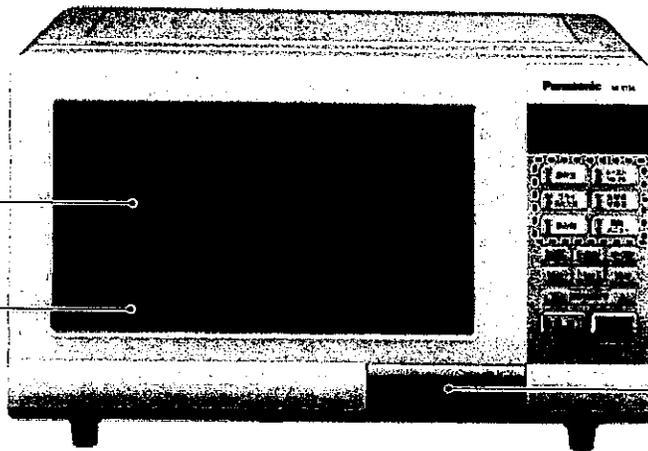

Operation panel

Door grip

Pull it toward you, and the door will open.

Door panel Shows Auto cook number and dish name

■ 飲み物	■ 自動メニュー	簡単スープごはん	焼き物・揚げ物メニュー	■ お手入れ
8 牛乳・コーヒー	10 ゆで野菜	12 きのことしょうが	14 塩さば	16 なすのクラダン
9 酒かん	11 ゆで根菜	13 キムチクッパ	15 からあげ	17 ひとくちカツレツ
■ Drinks	■ Auto cook	■ Easy-to-cook soup with rice	■ Grill/Fry	■ Maintenance
8. Milk, coffee	10. Boiled leafy vegetables	12. Mushrooms and ginger	14. Salted mackerel	18. Deodorize
9. Sake	11. Boiled root vegetables	13. Kimchi gukba	15. Fried chicken	
			16. Eggplant gratin	
			17. Fried meat	

Operation panel

* "M" indicates shop display mode.
Cooking is not possible in this mode.
【How to reset the mode】

- ① Push the **レンジ** "Microwave" button, then push the **1 あたため・スタート**
- ② "[1] Heat/Start" button four times. If the **取消** "Cancel" button is then pushed four times, "M" will disappear from the display and the mode will be cancelled.
- ③ Press the **取消** "Cancel" button four times.

Temperature/Finish adjust button


This button is used to set the temperature for oven cooking. When reheating by pressing the **1 あたため・スタート** "[1] Heat/Start" button directly or this is also used in adjusting the cooking strength for "Heat" or for the automatic menu.

Cancel button

This button is used when you want to stop cooking midway through or when a wrong button has been pressed.

- When you check the cooking progress, open the door instead of pressing the **取消** "Cancel" button.

Press the **1 あたため・スタート**

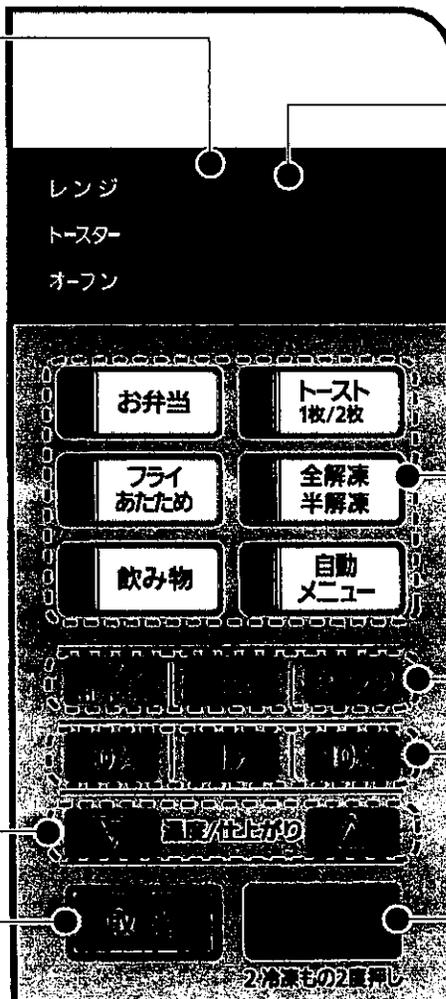

Display panel

Auto cook button

This button requires no time or temperature setting.
The **4 トースト 1枚/2枚** "[4] 1/2 slices of toast" button sets the number of slices.

Manual cook button

- レンジ** Microwave button
- トースター** Toaster button
- オーブン** Oven button

This function requires time or temperature setting depending on the state of the food or the desired finish.

Timer button

This button is used to set the heating time for manual cooking. Press this button several times to reset "Minutes" and "Seconds" to "0".

Heat/Start button

- Use this button to heat rice or side dishes.