HITACHI DRYER DE-N4AX

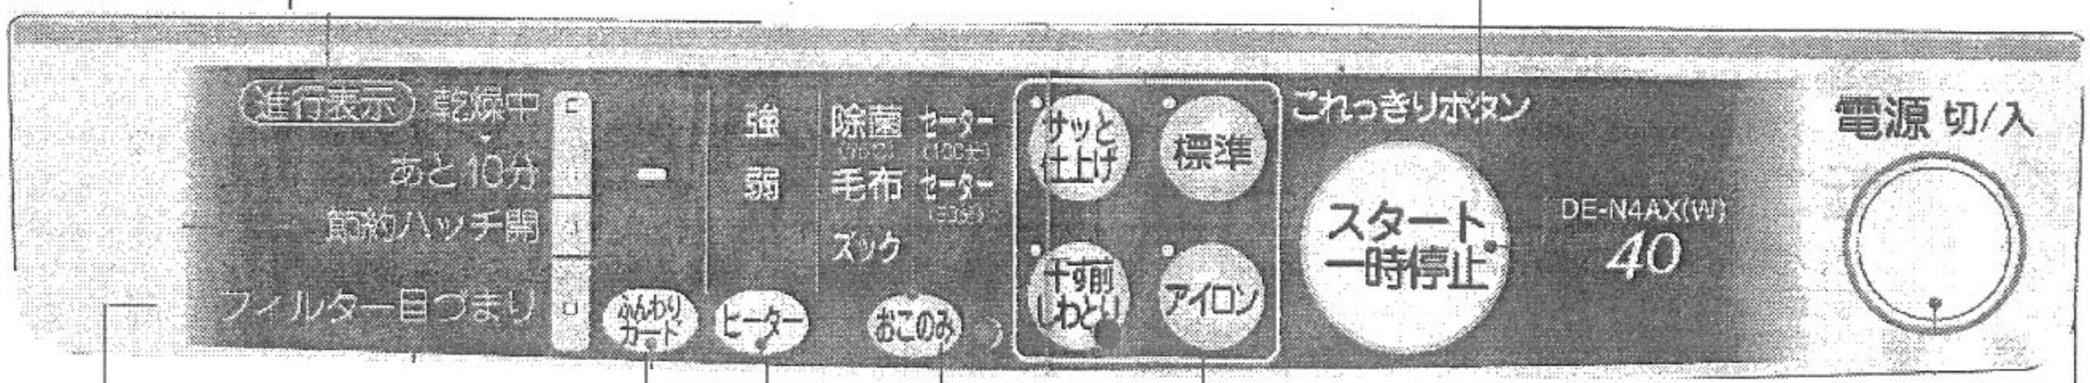

Process indicator

Start/Pause button
This button is used to start the operation or temporarily pause the operation.

Filter dust indicator

Gentle Protection button

Heater Selector button

Course selector button

Power switch
Press the button to switch the unit ON.